

SPRING SPACER


HIGH PERFORMANCE TRANSMISSION PARTS

FEATURES & BENEFITS:

- Preloads the spring for increased pump output
- Stabilizes pressure

Part No. 77917-RV

Spring Spacer

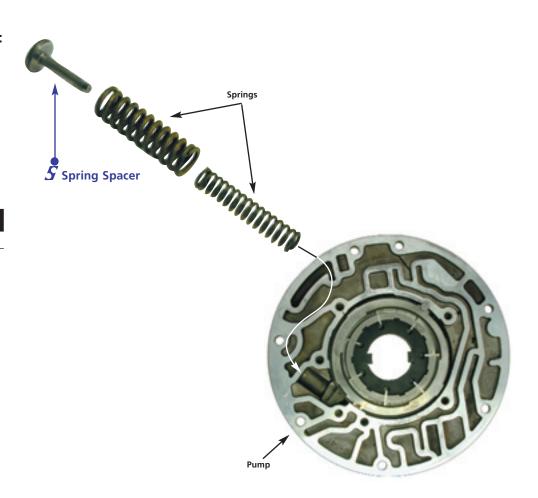

PART SUMMARY

A common desire with 4L60 & E transmissions is to increase pump volume or output. A common problem is fluctuating pressure in reverse. Sonnax now offers a pump slide spring spacer, 77917-RV, that will preload the spring to give the pump increased output and stabilize the pressure.

INSTRUCTIONS

To install the Sonnax pump slide spring spacer, place the two OEM springs over the spacer stem, and reinsert into the pump cavity with the large spacer diameter seated against the pump wall. Refer to the picture above for proper arrangement.

©2004 Sonnax® 77917-RV (info) 05-11-04